


Classmate Reader

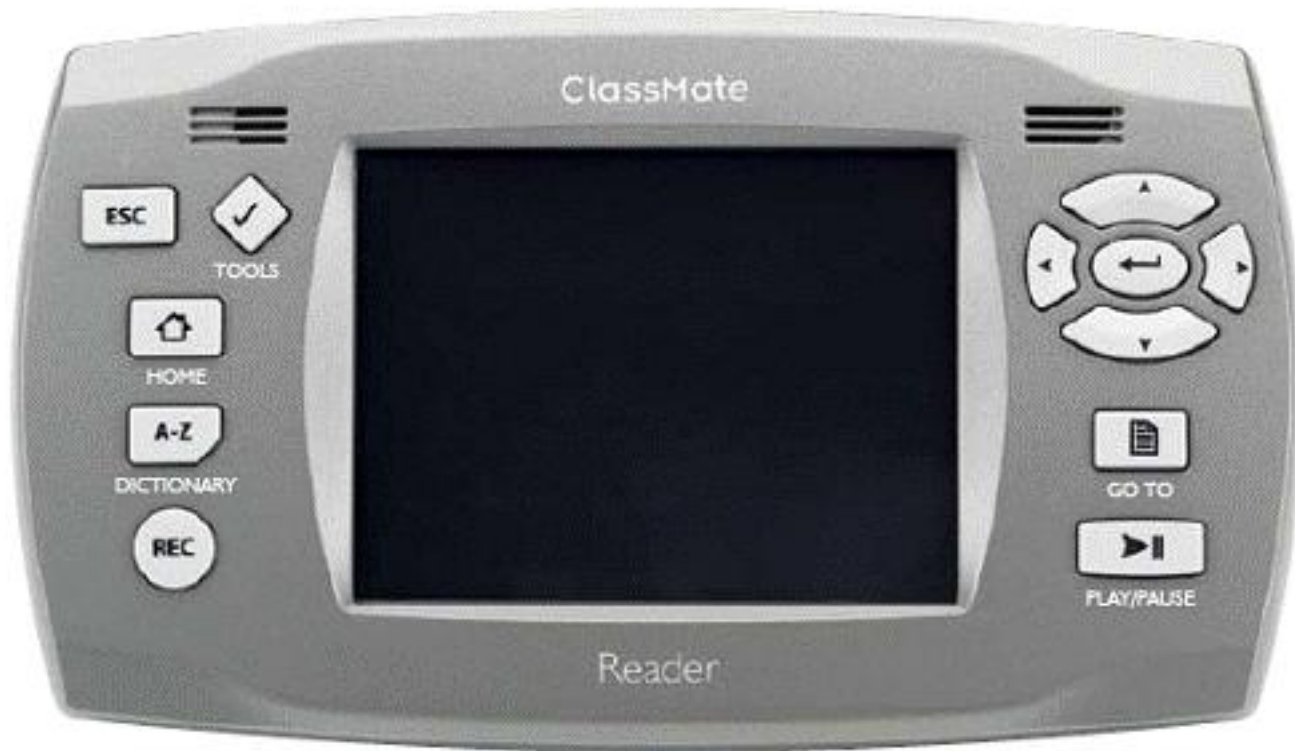

 
 

To lend a classmate reader for a 2-4 week trial contact the Idaho Assistive Technology Project at 800-ida-tech, www.idahoat.org or request online at www.idaho.at4all.com


This presentation is adapted from material by the Michigan Department of Education

Face of the Player




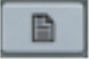 

Left Side of the Touchscreen


-  : **Escape**
-  : **Study Tools**
-  : **Home**
-  : **Dictionary**
-  : **Record**

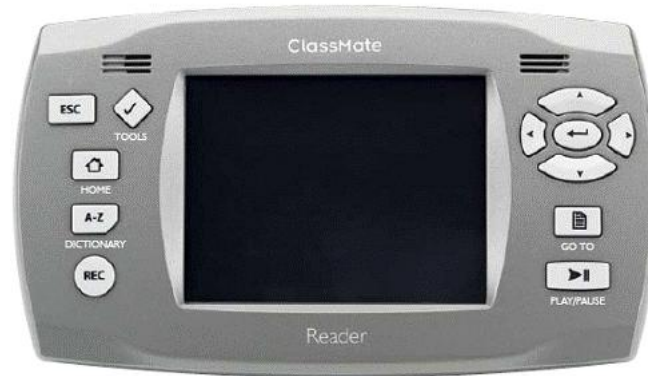

- Microphone is located above the study tools

Right Side of the Touchscreen

-  : **Four-way arrow navigation** buttons with the **Enter** button in the middle.
-  : **Go to Page/Header** button
-  : **Play / Pause** button

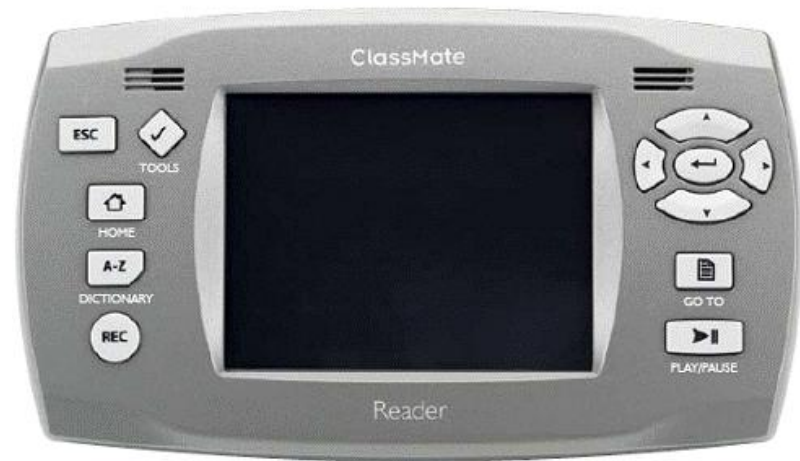
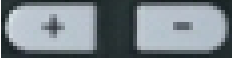 



- Speaker is located above the up arrow

Left Edge of the Player




On the left edge of the player, starting at the back, you will find:

-  : **Headphones jack**
-  : **Volume/Speed Up and Down**
-  : **Volume and Speed toggle button**

Right Edge of the Player




On the right edge of the player, starting at the back of the player, you will find:

-  : the **Power** button
- the **SD card slot**
- the **built-in stylus**.


Top Edge of the Player



When facing the top edge, you will find on the left:

-  : **Mini USB connector.** This is used to copy books from USB storage devices or to play material saved on USB memory sticks.

On the right side:

-  : **Power input jack.** It is used to connect the player to an electrical outlet.


Backside of the Player




Where to save your files on the reader

For DAISY / NISO / BRF Files	For Non-DAISY / Non-NISO Files	For TXT / HTML / XML Files
<ol style="list-style-type: none">1. Download the file:<ol style="list-style-type: none">a. Select Desktop.b. Click the Create New Folder icon.c. Type a folder name.d. Click Open.e. Click Save.2. Place it on your SD card:<ol style="list-style-type: none">a. On your Desktop, open My Computer.b. Select Removable Disk.c. Click and drag your new folder from the Desktop to the \$VRDTB folder.	<ol style="list-style-type: none">1. Download the file:<ol style="list-style-type: none">a. Select Desktop.b. Click the Create New Folder icon.c. Type a folder name.d. Click Open.e. Click Save.2. Place it on your SD card:<ol style="list-style-type: none">a. On your Desktop, open My Computer.b. Select Removable Disk.c. Click and drag your new folder from the Desktop to the \$VROtherBooks folder.	<p>Download the file directly to your SD card:</p> <ol style="list-style-type: none">1. Select Removable Disk in the Save In field.2. Select the \$VRTText folder.3. Click Save.

Text Window

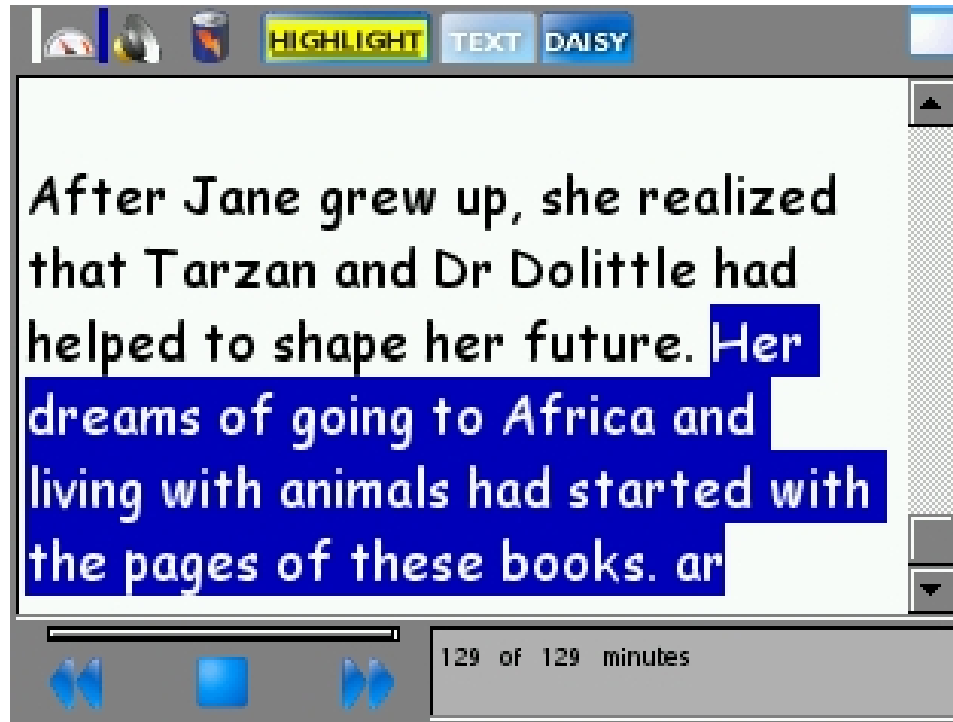

- Speed setting
- Volume setting

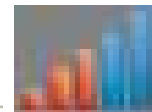



Battery charging



Fully charged battery



Battery charge high



Battery charge medium



Battery charge low




Battery charge very low

- Highlight



- Navigation

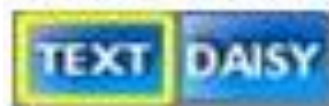

Visual Settings




Font settings



Color settings



Contrast

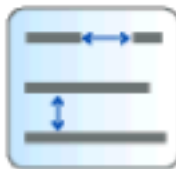

Spacing
Word/line



Vertical cursor
placement

... ..



Audio Settings



Study Tools

Study Tools

